



Pos.	Description
1*	Carbon Brush
2*	Brush Holder
3	Back Cover
4	Tapping Screw
5	Side Cover
6	Screw
7*	Circuit Board
8	Housing
9*	Stator
10	Stator Screw
11	Wind Guard
12	Ball Bearing 608Z
13*	Rotor
14	Plain Head Screw
15	Bearing Cover
16	Ball Bearing 6003Z
17	Middle Frame
18	Spring
19	Locking Screw
20	Twist Spring
21	Locking Screw
22	Locking Knob
23	Screw
24	Right Handle A
25	Cable Sleeve
26	Cable
27	Cable Clamp
28	Screw
29	Screw
30	Right Handle B
31*	Switch
32	Capacitor
33	Screw
34	Spring Washer
35	Plain Washer
36	Left Handle A
37	Left Handle B
38	Rotor Locating Nut
39	Spring
40	Self-Locking Block
41	Fore Cover
42	Screw M4x18
43	Collet Spring
44	Collet
45	Collet Nut
46	Spring
47	Locking Screw
48	Standing Pole A
49	Locating Screw
50	Standing Pole B
51	Active Spring
52	Sliding Pin
53	Screw
54	Backer Dollop
55	Steel Ball
56	Spring
57	Base
58	Base Board
59	Plain Head Screw
60	Guide Bush
61	Plain Head Screw
62	Dust Exhaustor
63	Spanner
64	Sliding Linear Rack
65	Guiding Pole
66	Dynamic Fine Tuning
67	Static Fine Tuning
68	Spring
69	Measuring Scale
70	Pointer
71	Screw
72	Plain Washer
73	Iron Board
74	Socket Head Screw
75	Plastic Board
76	Plain Head Screw

Pos.	Description
39	Spring
40	Self-Locking Block
41	Fore Cover
42	Screw M4x18
43	Collet Spring
44	Collet
45	Collet Nut
46	Spring
47	Locking Screw
48	Standing Pole A
49	Locating Screw
50	Standing Pole B
51	Active Spring
52	Sliding Pin
53	Screw
54	Backer Dollop
55	Steel Ball
56	Spring
57	Base
58	Base Board
59	Plain Head Screw
60	Guide Bush
61	Plain Head Screw
62	Dust Exhaustor
63	Spanner
64	Sliding Linear Rack
65	Guiding Pole
66	Dynamic Fine Tuning
67	Static Fine Tuning
68	Spring
69	Measuring Scale
70	Pointer
71	Screw
72	Plain Washer
73	Iron Board
74	Socket Head Screw
75	Plastic Board
76	Plain Head Screw

* Priority Spare Parts (PSP)

* Priority Spare Parts (PSP)